

ATL LEACH LINE INSTALLATION INSTRUCTIONS

SLINGSHOT



BEFORE YOU BEGIN:



- You will need:
1. Leach Line Tool
 2. Leach Line which is supplied w/ your kite.


If you require further assistance, email us or visit our website: www.sskiteboarding.com

Customer Service :
 International: intl.service@sskites.com
 North America: usa.service@sskites.com

IN YOUR PACKAGE:



1. Locate your center strut on the trailing edge of your kite. Sewn on the strut end is a pigtail attachment where you will first attach the leach line. Form a larks head in the end of the leach line that is sleeved like you kite flying line and secure over knot.

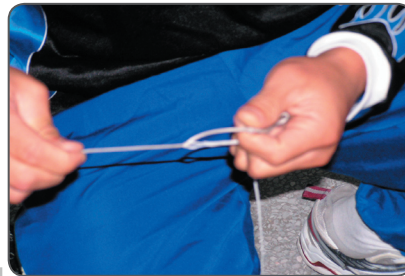

2. Now attach the other end of the leach line to the end of the tool by tying a basic overhand knot or half hitch.



3. Insert the tool into the leach line pocket through the hole as pictured.



If your kite doesn't have a hole, you will have to make a small incision into the scuff guard.



5. Push the tool through the pocket toward the wing tip.



6. Once you reach the strut you will have to guide the tool so that it follows the stitching line under the scuff guard. You will feed the tool through a hole, over the strut, and through another hole leading back into the trailing edge leach pocket. The leach line is never exposed and is covered by the scuff guard if installed properly.



7. Work the leach line and tool through the pocket toward the wing tip. You will have to repeat step 5 each time you encounter a strut.



8. Once you reach the end of the leach pocket at the wing tip, you will have to make a small cut in the patch that covers the grommet.



9. Feed the tool out of the leach pocket, through the freshly cut whole in the grommet. While holding the tool/leach line in your hand, pull the kite's trailing edge tight to fit the line properly.



10. Now guide the tool through the stainless steel O ring and into the wingtip pocket. Picture 8 can be used as reference.



11. Once you have pulled the leach line through, untie it from the tool and stuff the end of the leach line under the webbing at the bottom of the wingtip pocket as shown in the picture. It will be stored here until you are ready to install the ATL batten and bridle.

12. Repeat entire procedure for other side of kite.